


Kelvin SOLUTIONS



INNO-Freeze

AFFORDABLE
RELIABLE
RECYCLABLE

-  PHARMACEUTICAL
-  FRESH
-  FROZEN
-  TECHNICAL

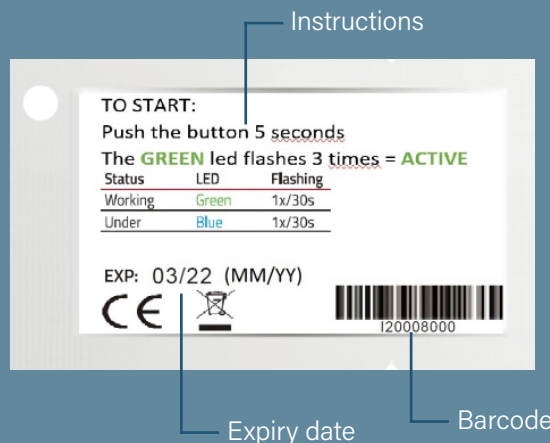

OPERATION INSTRUCTION:

1. Push the only button for 5 seconds and notice GREEN LED flashes three times, the indicate a successful start
2. Attach the started Inno-Freeze to your shipment
3. Push the only button for 5 seconds and notice BLUE LED flashes three times this indicate a successful stopping. Check the status after receiving the goods

WE LOVE TO HEAR FROM YOU!

Kelvin Solutions
+33 (0)1 8686 2237
info@kelvin-solutions.com
www.kelvin-solutions.com



SMART TEMPERATURE MONITORING REQUIRES SMART TEMPERATURE MONITORS

STATUS	ACTION	LED CONFIRMATION
Not started	Push button one time	OK LED + BLUE LED Flash one time
Recording-OK	Push button one time	OK LED Flash one time
Recording-Low alarm	Push button one time	BLUE LED flash one time
Stopped-OK	Push button one time	OK LED Flash two times
Stopped-Low alarm	Push button one time	BLUE LED flash two times

using notes:

1. Take care of the expire date
2. Don't hold the indicator too long in your hand (false alarm through self-heating)
3. Only for disposable use

WE LOVE TO HEAR FROM YOU!

Kelvin Solutions
+33 (0)1 8686 2237
info@kelvin-solutions.com
www.kelvin-solutions.com